

BALCONY BANISTER

Installation instruction

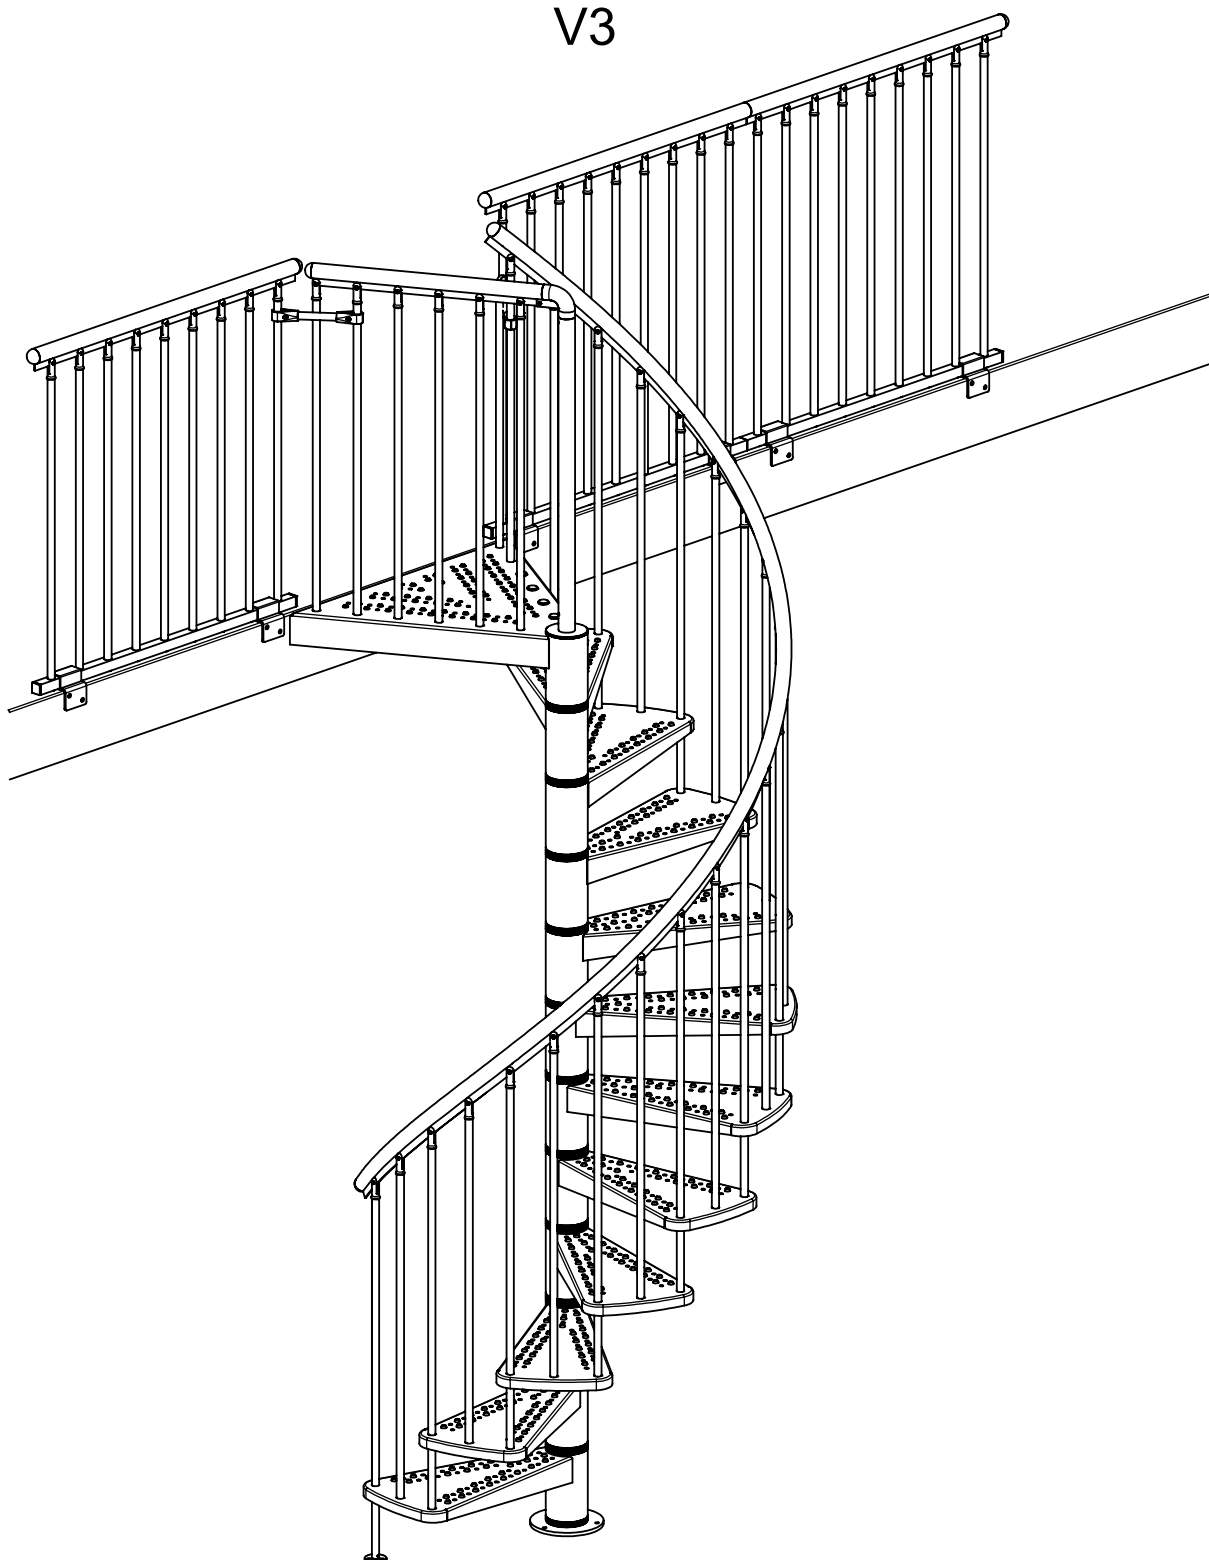
BRÜSTUNGSGELÄNDER


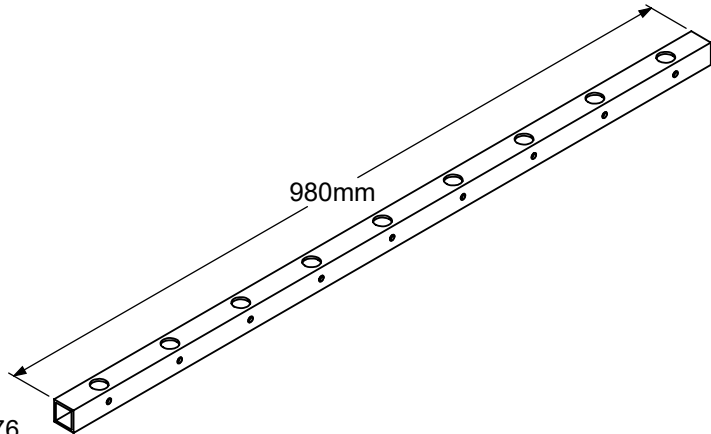

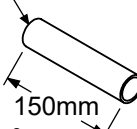
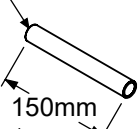

Montageanleitung

BALUSTRADE DE BALCON

Instructions de montage

V3



1  902mm (I) : × 9 (II) : × 9 K1-39170	2  980mm (I) : × 1 (II) : × 1 K1-30276				3  (I) : × 2 (II) : × 2 K2-30230	4  (I) : × 2 (II) : × 0 K1-30020				
7  Ø 42mm 1000mm (I) : × 1 (II) : × 1 K1-38510					8  (I) : × 2 (II) : × 0 K1-38590	9  Ø 34mm 150mm (I) : × 0 (II) : × 1 K1-39011	10  (I) : × 0 (II) : × 1 K1-39012	11  (I) : × 2 (II) : × 0 K2-39195	12  Ø 20mm 150mm (I) : × 1 (II) : × 0 K1-39171	
14  (I) : × 1 (II) : × 0 K2-30165										
20  (I) : × 6 (II) : × 4 K3-06068 Ø8×60	21  (I) : × 6 (II) : × 4 K3-04041 Ø8	22  (I) : × 6 (II) : × 4 K3-08004 Ø10×60	23  (I) : × 15 (II) : × 13 K3-05020 M8×8	24  (I) : × 9 (II) : × 9 K3-01201 M5×14	25  (I) : × 9 (II) : × 9 K3-03050 M5	26  (I) : × 1 (II) : × 1 K3-90001				

I	II
Start kit	Extension kit
Kit de départ	Kit de suite
Startpaket	Extrapaket
Startpakke	Ekstrapakke

